



ON Button

OFF Button - hold in for 5 seconds

TEST / ALARM Button



BEEP DISABLED ●

UPS RUNNING ON BATTERY ●

BATTERY REQUIRES SERVICE ●

EARTH FAULT ●

MODE INDICATOR  
Solid Green - Normal  
Flashing Green - Standby

also

Voltage Fluctuations are indicated by  
Solid Green alternating to Solid Red - Buck Mode  
Solid Green alternating to Flashing Red - Single Boost Mode  
Flashing Green alternating to Solid Red - Double Boost Mode

Buck Mode means the mains AC Voltage is > 240V  
and the UPS is reducing the voltage.

Boost mode means that the AC Voltage is < 230V  
and the UPS is boosting the voltage.



LOAD LEVEL INDICATOR

Normally at 25 to 50 %  
(never at 100 %)